

Customer Instructions

Carpet Extractor



Operating Instructions

1. Move as much furniture as possible out of the way, and vacuum the carpet thoroughly.
2. If high traffic areas of the carpet are stained, you may wish to pre-treat these areas by spraying some of the cleaning solution at full strength on those areas. If you purchase pre-treatment solutions elsewhere, follow the manufacturers' instruction for use.
3. Once the pre-treatment, if used, has had time to work, mix your cleaning solution into the bottom tank of the extractor with water that is very hot. Try to get water as hot as possible, but not boiling. Be sure to use a defoaming agent if using a cleaning solution purchased elsewhere. (the cleaning solutions sold by A to Z have a defoaming agent included). Use the cleaning solution in accordance with the manufacturer's instructions.
4. Start in the corner of the room farthest from the door. Operate the extractor by walking backwards, pulling the machine steadily, while the hot water dispenser, the brush and the vacuum are turned on and operating simultaneously. Overlap each pass to insure thorough cleaning. Then go back over the section you have cleaned with only the vacuum on, to extract the rest of the water. The carpet should now feel damp, but not wet.
5. Empty the tank at top of the unit as required when it becomes full.
6. After cleaning the entire carpet, fill the bottom tank with clean water, and repeat step 4. This will rinse excess cleaning solution from the carpet. Excess cleaning solution left in the carpet can attract soil.
7. Allow carpet to dry thoroughly before stepping on it, or moving furniture.
8. Rinse & clean the machine before returning it, to avoid cleaning charges.

Disclaimer:

These instructions are intended as a helpful reminder. They do not replace the full operating instructions found in the owners manual, which is available at the rental counter.

A to Z Equipment Rentals & Sales - 4 locations in the Phoenix Arizona Metro Area
If you like this piece of equipment, inquire about purchasing it !

If equipment does not work properly, notify office at once -

• Phoenix, 602-955-5100 • North Valley, 602-992-1150 • East Valley, 480-539-8700 • West Valley, 623-925-0200 •