

Customer Instructions Electric Tile Stripper



Warning: Never transport machine with the blade installed. Do not install or remove blade with the electric cord plugged in.

Operating Instructions

1. Installing a blade: Loosen (do not remove) the 2 long nuts enough to separate the 2 red plates. Insert the blade between the 2 red plates until it hits the built-in "Stop Bar" or until the slots slide onto the bolts securely. Make sure the blade is straight and that the bevel is facing the correct way (see below), then tighten the 2 long nuts evenly.



Concrete floors - extend blade with bevel facing up



Wood floors - extend blade with bevel facing down

2. Plug in the cord - tilt machine backwards slightly to raise blade off floor - position the machine at a 45-degree angle to the floor for the first cut and turn on switch.
3. Raise the wheels slightly off the floor so the stripper is resting on the blade; do not raise the machine too high.
4. Push machine across the floor with a diagonal cut, then proceed into the material being removed.
5. The wheels are for backward motion and transport.
6. If the blade rides over the material being removed, the blade is probably dull and needs to be replaced.



Disclaimer:

These instructions are intended as a helpful reminder. They do not replace the full operating instructions found in the owners manual, which is available at the rental counter.

**A to Z Equipment Rentals & Sales - 4 locations in the Phoenix Arizona Metro Area
If you like this piece of equipment, inquire about purchasing it !**

If equipment does not work properly, notify office at once -

• Phoenix, 602-955-5100 • North Valley, 602-992-1150 • East Valley, 480-539-8700 • West Valley, 623-925-0200 •