

Customer Instructions

Compact Excavator



Call 811, before you dig!

Warning: **Underground Utilities - Be absolutely sure you know where all under ground utilities are so that you can avoid hitting them while using the excavator. Utilities include but are not limited to electricity, gas, telephone, water, sewer, cable TV, lawn sprinklers etc.**

Warning: **Do not wear loose fitting clothing. Wear ear protection, eye protection and boots. Do NOT allow passengers on the excavator. NEVER leave the operator seat while the machine is running.**

Important Instructions

1. Fasten the seat belt, and put all controls the neutral position before starting the engine.
2. Never start the engine in a closed shed or garage.
3. Be familiar with the terrain you are working on, and use special caution on slopes & uneven surfaces.
4. Be aware when maneuvering the boom. Avoid excessive swing speed. Never move or swing the boom with people in your work area.
5. Never dig under the blade. This could result in creating a cave in, loss of control, injury and damage.
6. Do Not attempt to lift more weight than the excavator is designed for- doing so can result in damage to the machine and additional charges to you.
7. Do not refuel while the engine is hot.

Disclaimer:

These instructions are intended as a helpful reminder. They do not replace the full operating instructions found in the owners manual, which is available at the rental counter.

A to Z Equipment Rentals & Sales - Phoenix, Paradise Valley, East Valley, Arizona

For your equipment needs, A to Z has all the options - Rentals, Sales-New & Used, Parts, Service, & Financing

If you like this piece of equipment, inquire about purchasing it !

If equipment does not work properly, notify office at once - Phx., 602-955-5100 / P.V., 602-992-1150 / East Valley, 480-539-8700